


voice caddie VC300SE User Manual




Getting Started (1)

▶ Device Overview

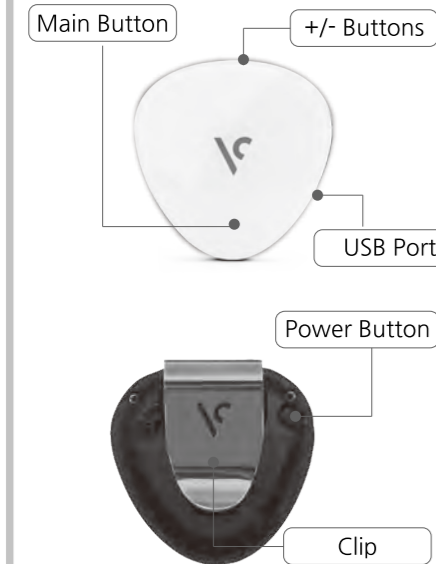

Getting Started (2)

▶ Once the power is 'ON', your VC300SE will automatically start searching for GPS and recognize the golf course.

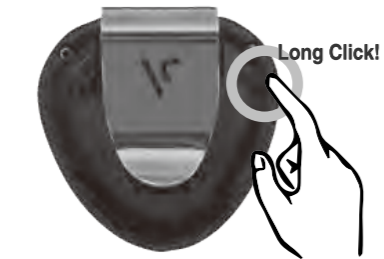

▶ "Golf Course is detected. Please move onto the tee box."
* Prior to each use, please allow approximately two minutes to sync the satellites.

▶ Press and hold the 'Volume (-) Button' for 1.5 seconds to select Meters or yards.
▶ Press and hold the 'Volume (+) Button' for 1.5 seconds to turn on and off Automatic Course and Hole Recognition.

Getting Started (3)

▶ Distance to the Center of the Green



Click the 'Main Button' once
▶ "Hole number (1-18), center, 000yards/meters."

Getting Started (4)

▶ Measuring Shot Distance



Press and hold the 'Main Button' for 2 seconds at the starting point to begin the measurement.
▶ "Measuring the shot distance."

Press and hold the 'Main Button' for 2 seconds again at the desired ending point to complete the measurement.
▶ "The shot distance is xx yard. Hole number 00, center, 000 yard/meter."

Getting Started (5)

▶ Distance to the Front and Back of the Green



Double-click the 'Main Button'
▶ "Hole number (1-18), front 000yard/meter, back, 000yard/meter"

VC300SE measures the direct distance from wherever the player stands to the center/front/back of the green.
* The measurement does not account for external conditions including, but not limited to, weather, wind, and elevation.

Charging



▶ Charging
Connect your VC300A to a computer using the USB Cable provided or to a power outlet using the Power Adapter (sold separately).
* VC300SE can be charged in either 'ON' or 'OFF' position.

▶ Key Indicators
Red light : Charging
Green light : Fully charged
Charging time : Approximately 2 hours
Battery Life : Approximately 9 hours
* In the areas with poor satellite reception, the battery life may be reduced.

Other Features

▶ Changing Holes Manually
If your VC300A locates the incorrect hole number, you can manually select the desired hole number.

1. Press and hold the '+' and '-' buttons simultaneously for 2 seconds
▶ "Changing holes."

2. Next, select the desired hole number using the '+' or '-' button.
▶ "Hole has been changed. Hole number (1-18)."

Voice Caddie Manager

▶ Updating firmware, course information, or changing voice language options

1. Visit Voice Caddie website, www.voicecaddie.com
2. Download the VC Manager software from the Golf Course Update page under Support menu.
3. Connect your device to your computer / laptop using the USB Cable provided.
4. Start the VC Manager to update firmware, course information, or to change voice language options.

▶ Supported languages
English, Korean, Chinese, Japanese, French, Spanish, Italian, Swedish, and German
* Visit www.voicecaddie.com for more information.

Note

- ① Time until finding the satellite on golf mode or fitness mode may be changed depending on reception conditions (weather, terrain)
- ② Hours of battery use may be notably reduced on poor reception condition in a territory and Rounding hours may be reduced during rounding in cold weather. We recommend turn on the power outside.
- ③ The device can estimate accurately the exercise consumption on estimation of the exercise amount of you input your weight accurately.
- ④ Negligence of the device in high-temperature such as the vehicle in summer or humid space including the golf bag may be the cause of failure.

Warranty

- ① Each Voice Caddie unit is manufactured under strict quality control and inspection guidelines
- ② In case of defects under normal use, replacements will be provided under warranty guidelines
- ③ Warranty will not cover issues related to misuse or incidental damages
- ④ Customer shall present this warranty and documents related to the Purchase(Receipt) upon request for A/S or Compensation.

Warranty

Device name	Voice Caddie	Warranty period
Model name	voice caddie VC300SE	1 year after purchase of the device (6 months for battery and other components)
Serial Number		
Sales Date		
Buyer address		
Name		Phone

Tel : 888-939-3978
E-mail : contact@voicecaddie.com
www.voicecaddie.com